

Warranty

We stand behind the quality of our product. We offer a 1-year limited warranty on every PhoneSoap product as well as a lifetime warranty on the UV-C bulbs. Exclusions and limitations may apply.

To view the full warranty and return policy visit: phonesoap.com/warranty

By using this product, you agree to the Legal and Privacy Policies as stated on our website at: phonesoap.com/legal

Please contact us with any questions or concerns. www.phonesoap.com/contact



PhoneSoap LLC

1837 S East Bay Blvd Suite 201
Provo, UT 84606
cs@phonesoap.com
(866) 432-0525



CAUTION

The manufacturer is not responsible for any interference or damage caused by unauthorized modifications to this equipment. UV light can be irritating to the eyes and skin. This device has been designed to contain UV exposure. Do not attempt to look directly at the UV lamp while it is on. UV light can potentially cause discoloration with continuous, prolonged exposure to white or lightly pigmented plastics.

PhoneSoap 3 has been lab tested and proven to kill 99.99% of the following household germs: Escherichia coli (E. Coli), Salmonella typhimurium (Salmonella), Staphylococcus aureus (Staph), Methicillin-resistant Staphylococcus aureus (MRSA), Influenza A H1N1 (Flu), Rhinovirus (common cold)

FCC STATEMENT

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES: REORIENT OR RELOCATE THE RECEIVING ANTENNA.; INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.; CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.; CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

FCC RADIATION EXPOSURE STATEMENT


THIS EQUIPMENT COMPLIES WITH THE FCC RF RADIATION EXPOSURE LIMITS SET FORTH FOR AN UNCONTROLLED ENVIRONMENT. THIS EQUIPMENT SHOULD BE INSTALLED AND OPERATED WITH A MINIMUM DISTANCE OF 20 CENTIMETERS BETWEEN THE RADIATOR AND YOUR BODY. THIS EQUIPMENT COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE. (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREED OPERATION.

WARNING: THIS PRODUCT CONTAINS A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. WWW.P65WARNINGS.CA.GOV


Let's get started.



Ready to sanitize, right out of the box.

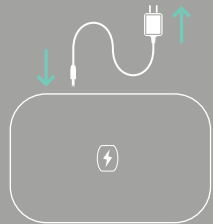


Plug PhoneSoap 3
into power with
provided cord.

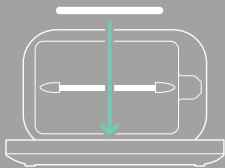

Place phone
in center of
sanitizing bay.



Close lid to
begin disinfection.
Do not force shut.

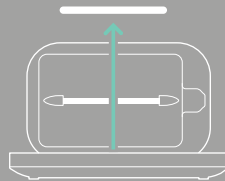


After 10 minutes,
remove newly
sanitized phone.



For an instructional video and language-specific
instructions, scan the QR code or visit the following link:

phnsp.co/ps_3_setup

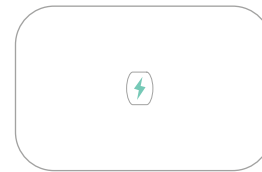

Indicator Light

When sanitizing light will be lit.



Power & USB

Plug provided power adapter
to power unit. Use additional
cords to charge phone.



Acoustic Passthrough

Hear notifications and
alerts from inside unit.

Need help?

If you are experiencing
trouble, please contact us:

phonesoap.com/contact

(866) 432-0525